

SANTEC OPTICAL COMPONENTS

WDM, Mux/ Demux, Add/ Drop Modules

RoHS
Compliant

8 Channel Mux/ DeMux Module **MDM-15**

The MDM-15 is multi-channel WDM Multiplexer or Demultiplexer based on dielectric thin-film filter technology. The module is designed to add or drop 8 channels with ITU grid spacing of 100, 200 or 400GHz. Channels can be dropped with high adjacent channel isolation and all channels are subject to low insertion loss. The MDM-15 can also be configured with an additional band splitting filter to enable device cascading in DWDM systems.

Features


- ▶ Low loss, low PDL
- ▶ High channel isolation
- ▶ Upgradable configuration suitable for scalable system
- ▶ Compact design
- ▶ Telcordia GR-1221 qualified
- ▶ RoHS compliant

Applications


- ▶ Wavelength Mux / Demux
- ▶ Optical Add Drop Multiplexer (OADM)

Model Variations

In Mux and Demux configurations the filter specifications can be tailored to the end-users performance and cost requirements. The "Upgraded" MDM-15 has a common input and output port enabling an express channel for channels which are not to be dropped. Alternatively, the terminated MDM-15 (without express port) realizes lower insertion loss for each channel.

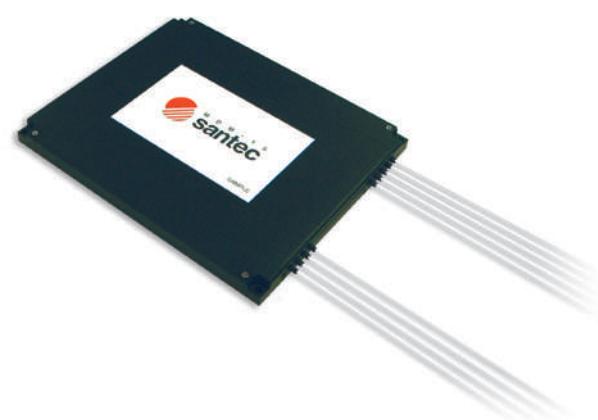

Dimensions

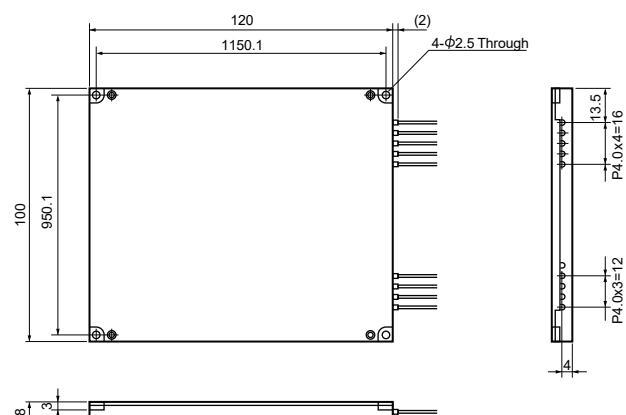

■ 100GHz 8 Channel Mux / DeMux Module

Parameter	Units	Mux	DeMux
Wavelength Range	nm		1520 - 1610
Channel Spacing	GHz		100
Number of Channels	dB		8
Passband	nm		0.11
Flatness	dB		≤ 0.5
Insertion Loss	dB	≤ 2.8	≤ 3.1
Adjacent Isolation	dB	≥ 12	≥ 25
Non -Adjacent Isolation	dB	-	≥ 40
Directivity	dB		≥ 45
Return Loss	dB		≥ 45
Polarization Dependent Loss (PDL)	dB		≤ 0.2
Polarization Mode Dispersion (PMD)	ps		≤ 0.1
Max Optical Power	dBm		≤ 23
Operating Temperature	C		-5 to +70
Storage Temperature	C		-40 to +85

■ 200 GHz 8 Channel Mux / DeMux Module

Parameter	Units	Mux	DeMux
Wavelength Range	nm		1520 - 1610
Channel Spacing	GHz		200
Number of Channels	dB		8
Passband	nm		0.20
Flatness	dB		≤ 0.5
Insertion Loss	dB	≤ 2.8	≤ 3.1
Adjacent Isolation	dB	≥ 13	≥ 25
Non -Adjacent Isolation	dB	-	≥ 40
Directivity	dB		≥ 45
Return Loss	dB		≥ 45
Polarization Dependent Loss (PDL)	dB		≤ 0.2
Polarization Mode Dispersion (PMD)	ps		≤ 0.1
Max Optical Power	dBm		≤ 23
Operating Temperature	C		-5 to +70
Storage Temperature	C		-40 to +85

*¹ All parameters are specified over operating temperature range.

*² Insertion loss per filter includes Ripple and PDL, without connectors.

*³ Please contact Santec to discuss specific performance requirements.

■ Ordering Code

MDM-15-[A]-[B]-[C]-[D]/[E]

A=Channel

7=7ch, 8=8ch

B=Type

10A0=100GHz Add / 10D0=100GHz Drop / 20A0=200GHz Add

20D0=200GHz Drop

C=Fiber Length

10=1.0m, 20=2.0m

D=Connector

00=No Connector, FS=FC-SPC, FA=FC-APC, SS=SC-SPC, SA=SC-APC

MU=MU-SPC, MJ=MUJ-SPC, LC=LC-SPC

E=Center Wavelength of shortest wavelength

(ex) 1552.52nm -->1552.52

www.santec.com/en/

2023© Santec AOC corporation santec reserves the right to make changes in equipment design, components or specifications without notice.

Santec Japan Corporation

5823 Ohkusa-Nenjozaka, Komaki, Aichi 485-0802, Japan Tel. +81-568-79-3536 Fax +81-568-79-1718

Santec USA Corporation

400 Kelby Street Suite 1501, Fort Lee, NJ 07024, USA Toll Free +1-800-726-8321(santec-1) Tel. +1-201-488-5505 Fax +1-201-488-7702

Santec Europe Ltd.

99 Park Drive Milton Park, Abingdon Oxfordshire, OX14 4RY, U.K. Tel. +44-20-3176-1550

Santec (Shanghai) Co., Ltd.

21F Room H, Hua Du Bldg., No.838 Zhangyang Road, Pudong District, Shanghai 200122 China Tel: +86-21-58361261, Fax: +86-21-58361263

